




ACORN SAFETY
P.O. BOX 3527
CITY OF INDUSTRY, CA 91744-0527
UNITED STATES OF AMERICA
WWW.ACORNSAFETY.COM

INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS

Freeze Prevention Valve / Scald Prevention Valve

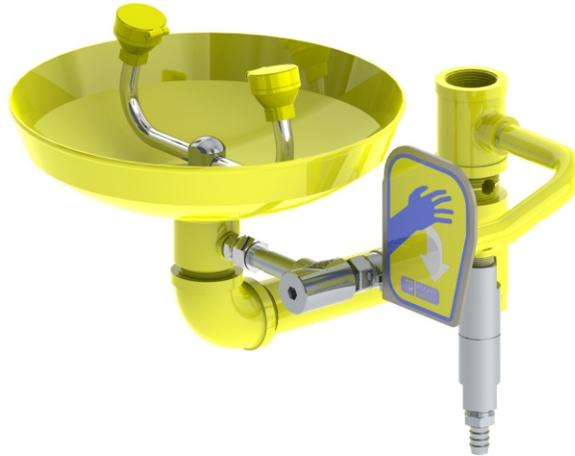

MODEL S0000-FPV / S0000-SPV

TECHNICAL ASSISTANCE TOLL FREE TELEPHONE NUMBER

1.800.591.9360

TECHNICAL ASSISTANCE FAX: 1.626.855.4894

NOTES TO THE INSTALLER:

- 1. Please leave this documentation with the owner of the fixture when finished.**
- 2. Please read this entire booklet before beginning the installation.**
- 3. Check your installation for compliance with plumbing, electrical, ANSI Z358.1 and other applicable codes.**

LIMITED WARRANTY **UNITED STATES AND CANADA**


Acorn Safety warrants that its products are free from defects in material or workmanship under normal use and service for a period of one year from date of shipment. Acorn's liability under this warranty shall be discharged solely by replacement or repair of defective material, provided Acorn is notified in writing within one year from date of shipment, F.O.B. Industry, California.

This warranty does not cover installation or labor charges and does not apply to materials, which have been damaged by other causes such as mishandling or improper care or abnormal use. The repair or replacement of the defective materials shall constitute the sole remedy of the Buyer and the sole remedy of Acorn under this warranty. Acorn shall not be liable under any circumstances for incidental, consequential or direct charges caused by defects in materials, or any delay in the repair or replacement thereof. This warranty is in lieu of all other warranties expressed or implied. Product maintenance instructions are issued with each unit and disregard or non-compliance with these instructions will constitute an abnormal use condition and void the warranty. Stainless steel must be protected on jobsites during construction and must be properly maintained after the water has been introduced into the safety product or Acorn's warranty is void.

SCALD AND FREEZE PROTECTION VALVE OPTION PARTS BREAKDOWN

ASSEMBLY INSTRUCTIONS:

1. Use proper thread sealant to thread the Valve (item no. 3) onto 1/2" fitting of item no. 2.
2. Connect supplied tubing to barbed fitting on the valve, and guide tubing to the base of the unit as shown.
3. Use nylon straps to vertically secure drain line to bottom leg of unit to ensure proper drainage to floor (drain or run-off).
4. Turn on water supply and check for leaks and proper function of the unit.

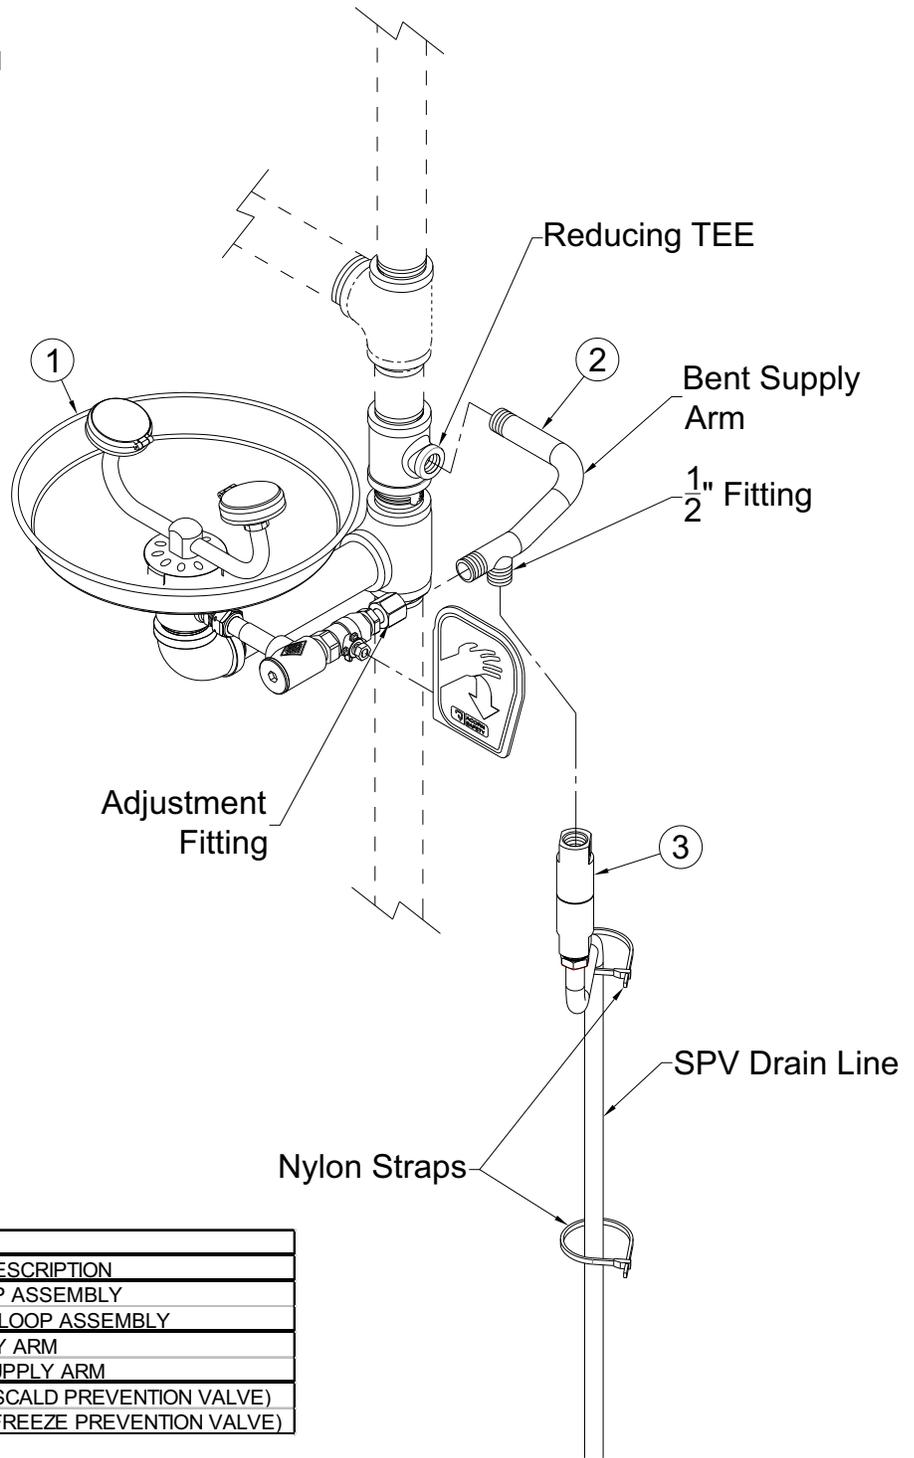

PARTS LIST		
ITEM #	PART NUMBER	DESCRIPTION
1	7102-523-001	SPV COMBO LOOP ASSEMBLY
	7102-530-002	ADA SPV COMBO LOOP ASSEMBLY
2	7102-037-001	SPV BENT SUPPLY ARM
	7102-040-001	ADA SPV BENT SUPPLY ARM
3	7100-310-001	SPV ASSEMBLY (SCALD PREVENTION VALVE)
	7100-312-001	FPV ASSEMBLY (FREEZE PREVENTION VALVE)