

REFERENCE DRAWINGS		
1820 -SW Wall Sleeve	9925-291-001	
Mounting Hardware	9957-900-001	


INSTALLATION INSTRUCTIONS:

WALLS OF MINIMUM THICKNESS OF 4-3/4"

- A-HAND TIGHTEN (4) MOUNTING STUDS ① INTO NUTS ② ON BACK OF RECESSED SHELF ③. PLACE SHELF ③ IN WALL OPENING.
- B-FROM CHASE SIDE, PLACE BACK PLATE 4 OVER STUDS 1. SCREW NUTS 5 ONTO STUDS 1, & TIGHTEN. NOTE: DO NOT EXCEED 6.5 FT/LBS MAX. TORQUE ON MOUNTING NUTS 5.


WALLS OF MAXIMUM THICKNESS OF 4-3/4"


- A-HAND TIGHTEN (4) MOUNTING STUDS ① INTO NUTS ②
 ON BACK OF RECESSED SHELF ③. PLACE SHELF ③
 IN WALL OPENING.
- B-FROM CHASE SIDE, PLACE BACK PLATE (4) OVER STUDS (1). SCREW NUTS (5) ONTO STUDS (1). THREAD 1/2" STUDS (6) THRU PLATE (4) & TIGHTEN AGAINST WALL TO SECURE SHELF (3).




BOTH VIEWS ARE FROM CELL SIDE.

SHADED AREAS ARE REQUIRED WALL OPENINGS OR BLOCKOUTS.

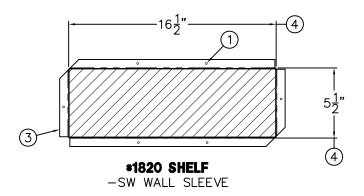

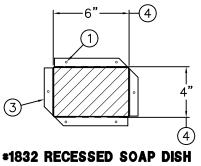

-SW WALL SLEEVE

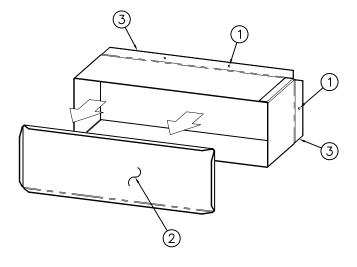

INSTALLATION INSTRUCTIONS:

SLEEVES ARE INSTALLED IN FORMS USING NAIL HOLES (1) PROVIDED OR GROUTED INTO BLOCK WALLS BECOMING A PERMANENT PART OF THE WALL.

NOTE: FOR POURED WALL CONSTRUCTION, TEMPORARY BRACING SHOULD BE INSTALLED WITHIN OPENING TO PREVENT DEFORMATION TO SLEEVE WHICH MAY OCCUR DURING POUR. DO NOT POUR CONCRETE DIRECTLY ON TOP OF WALL SLEEVE. THE OPENING IS CAPPED; THIS CAP (2) MUST BE REMOVED FROM THE CHASE SIDE OF THE WALL SLEEVE BEFORE INSTALLING SHELF OR RECESSED SOAP DISH.

- A-INSTALL SLEEVE AT DESIRED CELL SIDE HEIGHT WITH FLANGE (3) ON CHASE SIDE OF WALL.
- B- USE BLOCKOUT DIMENSIONS (4) WHEN SLEEVES ARE NOT AVAILABLE.

ACORN ENGNEERING CO P.O. BOX 3527 INDUSTRY, CO (626) 336-4561 FAX (626) 9	OMPANY A. 91744 961-2200 -SW WALL SLEEVE FO	-SW WALL SLEEVE FOR *1820 & *1832		
	MANUFACTURE DATE	DATE ISSUED	DRAWING NUMBER	
	DECEMBER 1971	03/01/90		
8/	TO PRESENT	DATE REVISED 02/11/09	9925-291-001	