




**MODEL #1830**

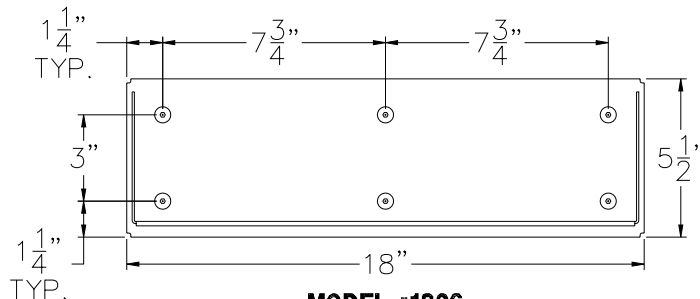


**MODEL #1826**

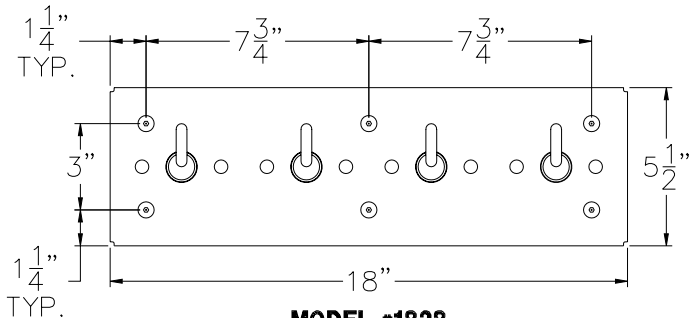

**MODEL #1828  
MODEL #1828-ECH**

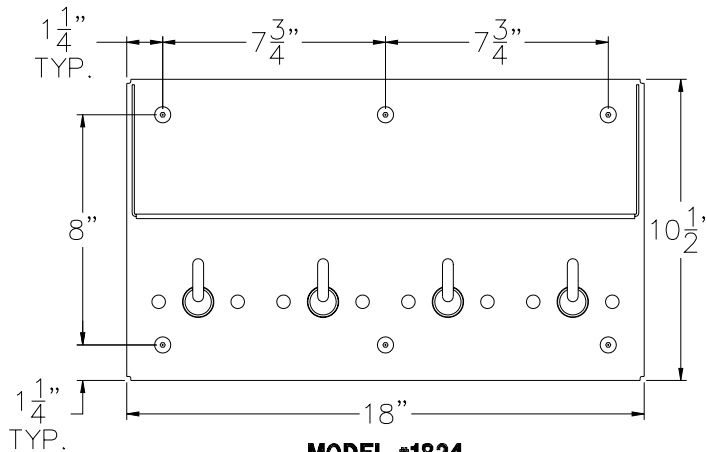

**MODEL #1824  
MODEL #1824-ECH**

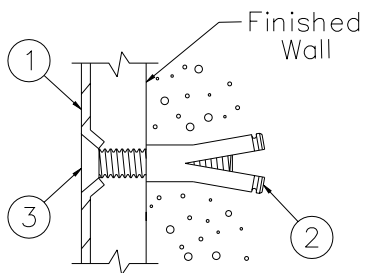

**MOUNTING DETAIL**

<b>REFERENCE DRAWING</b>	
Fasteners	9951-005-001

**INSTALLATION INSTRUCTIONS:**

A—USE PUNCHED MOUNTING HOLES IN FIXTURE ① AS A TEMPLATE FOR MARKING THE LOCATIONS FOR THE WALL ANCHORS ② (BY OTHERS) ON THE WALL.

B—INSTALL WALL ANCHORS ② (BY OTHERS).

C—FASTEN FIXTURE ① TO WALL USING SCREWS ③ PROVIDED.

<p><b>ACORN ENGINEERING COMPANY</b> P.O. BOX 3527 INDUSTRY, CA. 91744 (626) 336-4561 FAX (626) 961-2200</p>	<p>TITLE <b>FRONT MOUNTED ACCESSORIES, CAT #1824, #1826, #1828, #1830</b></p>		
	<p>MANUFACTURE DATE <b>DECEMBER 1971 TO PRESENT</b></p>	<p>DATE ISSUED <b>4/16/97</b></p>	<p>DRAWING NUMBER <b>9925-136-001</b></p>
	<p>DATE REVISED</p>		