




MODEL #1830

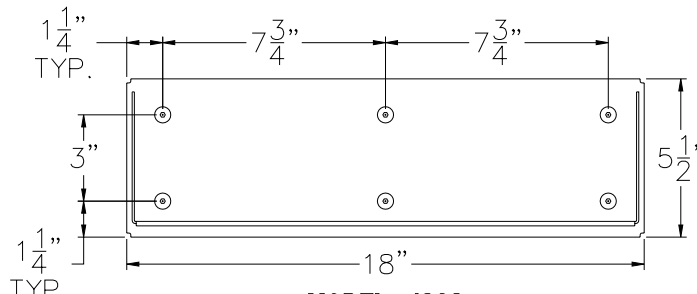


MODEL #1826

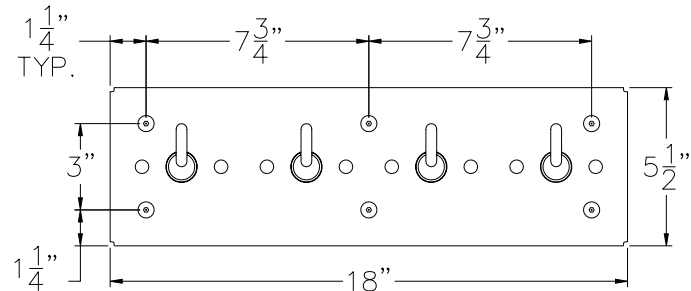

**MODEL #1828
MODEL #1828-ECH**

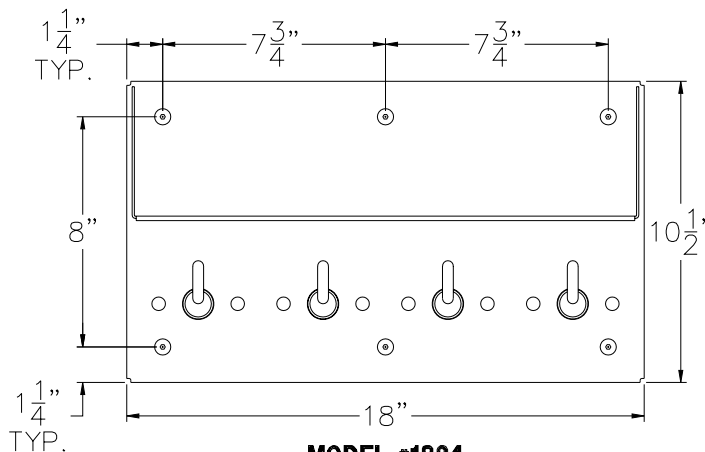

**MODEL #1824
MODEL #1824-ECH**

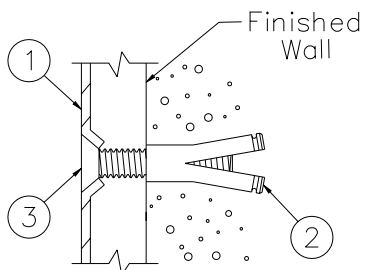

MOUNTING DETAIL

REFERENCE DRAWING	
Fasteners	9951-005-001

INSTALLATION INSTRUCTIONS:

A—USE PUNCHED MOUNTING HOLES IN FIXTURE ① AS A TEMPLATE FOR MARKING THE LOCATIONS FOR THE WALL ANCHORS ② (BY OTHERS) ON THE WALL.

B—INSTALL WALL ANCHORS ② (BY OTHERS).

C—FASTEN FIXTURE ① TO WALL USING SCREWS ③ PROVIDED.

<p>ACORN ENGINEERING COMPANY P.O. BOX 3527 INDUSTRY, CA. 91744 (626) 336-4561 FAX (626) 961-2200</p>	<p>TITLE FRONT MOUNTED ACCESSORIES, CAT #1824, #1826, #1828, #1830</p>		
	<p>MANUFACTURE DATE DECEMBER 1971 TO PRESENT</p>	<p>DATE ISSUED 4/16/97</p>	<p>DRAWING NUMBER 9925-136-001</p>
	<p>DATE REVISED</p>		