




REFERENCE DRAWINGS:

- TC1 TRAP COVER INSTALLS	9912-631-001
- TC3 TRAP COVER INSTALLS	9912-651-001

DIMENSIONS SHOWN ARE FOR ADA ADULT HEIGHT.
ADJUST VERTICAL DIMENSIONS WITH (*) AS NECESSARY
FOR JUVENILE HEIGHTS PER FEDERAL, STATE, & LOCAL
CODES

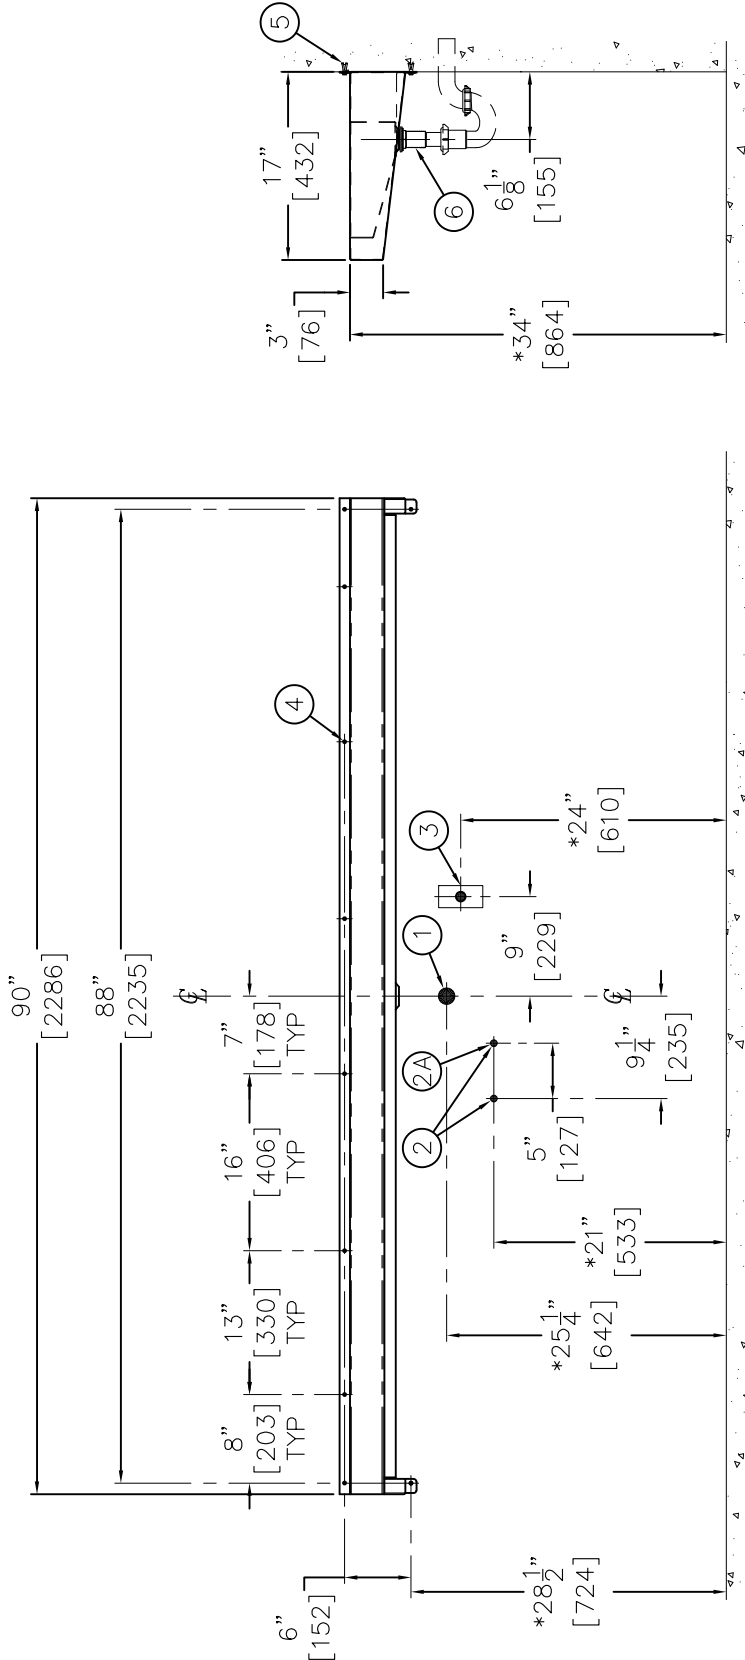

INSTALLATION INSTRUCTIONS

A-ROUGH-IN FOR THE FOLLOWING:

- 1-1/2" OD WASTE OUTLET (1).
- 1/2" NPT HOT & COLD SUPPLY INLETS (2), FOR OPTIONAL FAUCET OR FAUCET BY OTHERS.
- 3/8" O.D. COLD SUPPLY INLETS (2A) FOR OPTIONAL BOTTLE FILLER.
- 120VAC, 60 Hz, 3A (MAX.) GFCI PROTECTED, ELECTRICAL RECEPTACLE (3) FOR OPTIONAL SENSOR OPERATED FAUCET, BOTTLE FILLER AND SOAP DISPENSER.
- (10) WALL MOUNTING PUNCHING (4), FOR INSTALLER PROVIDED 1/4" WALL ANCHORS AND ANCHORING HARDWARE (5).



- B-ANCHOR FIXTURE TO WALL USING INSTALLER PROVIDED ANCHORING HARDWARE (5).
- C-MAKE UP WASTE CONNECTION FOR OPTIONAL GRID STRAINER WITH P-TRAP (6) OR WASTE FITTINGS BY OTHERS.
- D-FLUSH SUPPLY LINES (2) PRIOR TO MAKING UP CONNECTIONS FOR OPTIONAL FAUCET OR BOTTLE FILLER.



REFERENCE DRAWINGS:

DSW130 & MD-DSW130	9912-630-001
DSW260 & MD-DSW260	9912-640-001
DSW390 & MD-DSW390	9912-650-001
DSW4120 & MD-DSW4120	9912-660-001

**DIMENSIONS SHOWN ARE FOR ADA ADULT HEIGHT.
ADJUST VERTICAL DIMENSIONS WITH (*) AS NECESSARY
FOR JUVENILE HEIGHTS PER FEDERAL, STATE, & LOCAL
CODES**

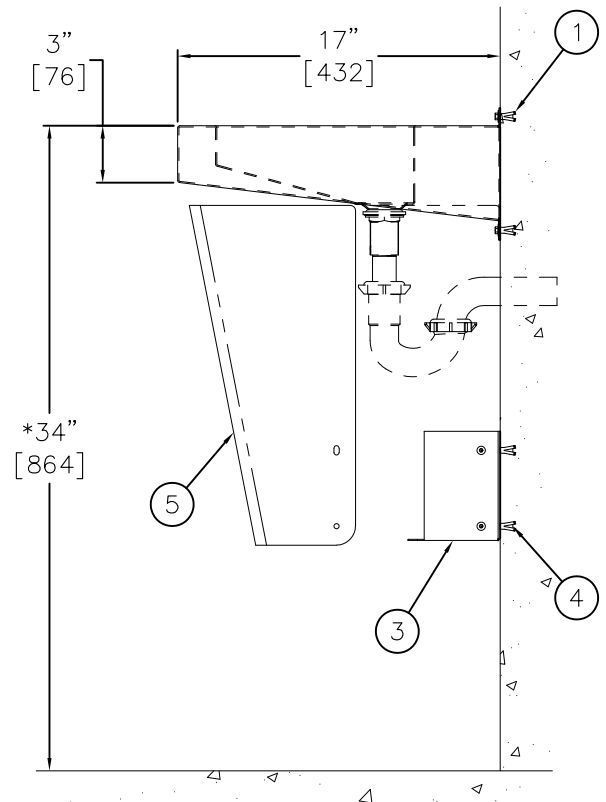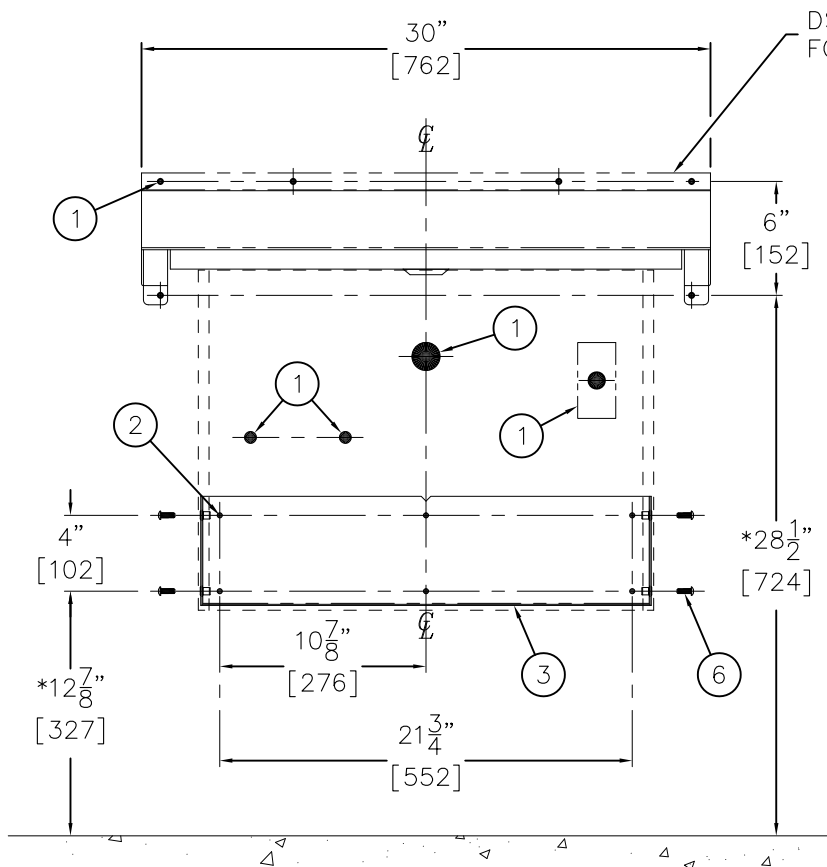

INSTALLATION INSTRUCTIONS:

A—ROUGH-IN FOR THE FOLLOWING:

- SEE APPROPRIATE ROUGH-IN SHEET FOR ITEMS ①.
- (6) WALL MOUNTING POINTS ②, FOR TRAP ENCLOSURE MOUNTING BRACKET ③ FOR INSTALLER PROVIDED 1/4" WALL ANCHORS AND ANCHORING HARDWARE ④.

B—ANCHOR MOUNTING BRACKET ③ TO WALL USING INSTALLER PROVIDED ANCHORING HARDWARE ④.


C—MOUNT TRAP ENCLOSURE ⑤ TO MOUNTING BRACKET ③ WITH PROVIDED FASTENERS ⑥.



REFERENCE DRAWINGS:

DSW390 & MD-DSW390 9912-650-001

DIMENSIONS SHOWN ARE FOR ADA ADULT HEIGHT.
ADJUST VERTICAL DIMENSIONS WITH (*) AS NECESSARY
FOR JUVENILE HEIGHTS PER FEDERAL, STATE, & LOCAL
CODES

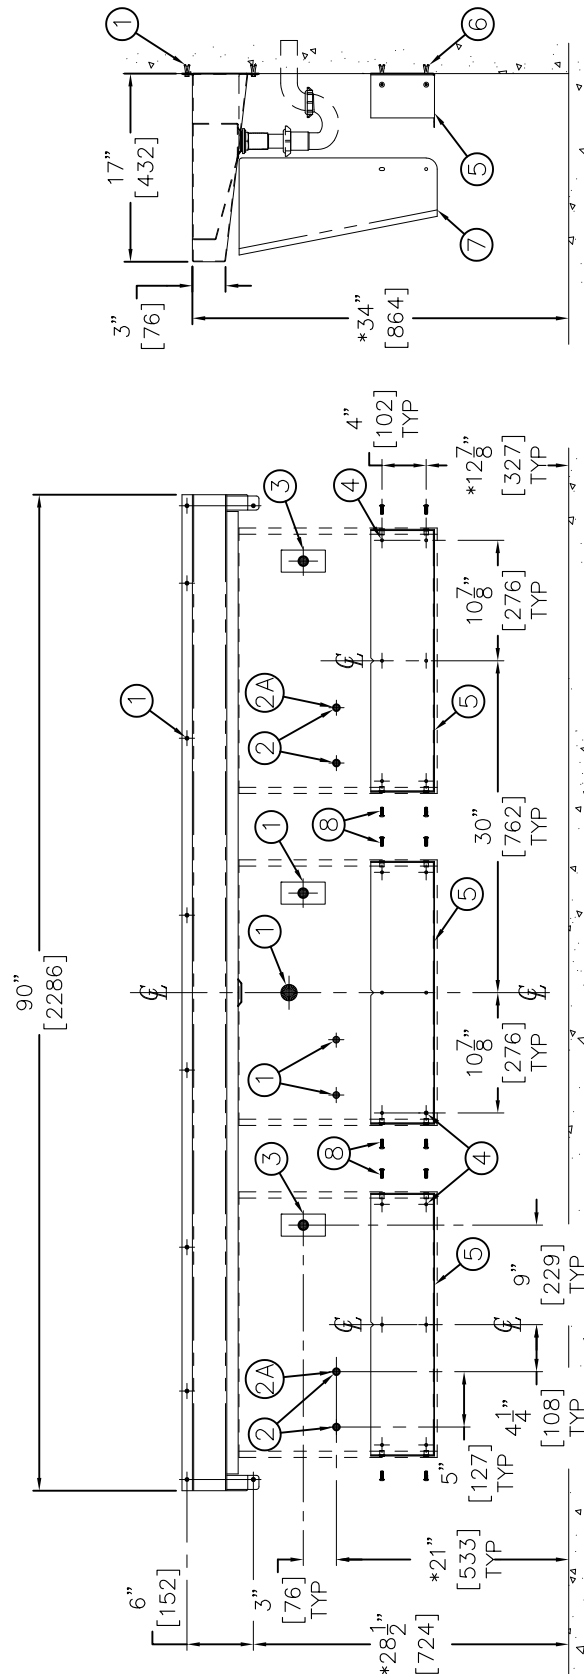


INSTALLATION INSTRUCTIONS

A-ROUGH-IN FOR THE FOLLOWING:

- SEE APPROPRIATE ROUGH-IN SHEET FOR ITEMS ①.
- 1/2" NPT HOT & COLD SUPPLY INLETS ②, FOR OPTIONAL FAUCET OR FAUCET BY OTHERS.
- 3/8" O.D. COLD SUPPLY INLETS ②A FOR OPTIONAL BOTTLE FILLER.
- 120VAC, 60 Hz, 3A (MAX.) GFCI PROTECTED, ELECTRICAL RECEPTACLE ③ FOR OPTIONAL SENSOR OPERATED FAUCET, BOTTLE FILLER AND SOAP DISPENSER.

ROUGH-IN FOR THE FOLLOWING CONTINUES:

- (6) WALL MOUNTING POINTS ④, FOR EACH TRAP ENCLOSURE MOUNTING BRACKET ⑤ FOR INSTALLER PROVIDED 1/4" WALL ANCHORS AND ANCHORING HARDWARE ⑥.
- B-ANCHOR MOUNTING BRACKET ⑤ TO WALL USING INSTALLER PROVIDED ANCHORING HARDWARE ⑥.
- C-MOUNT TRAP ENCLOSURE ⑦ TO MOUNTING BRACKET ⑤ WITH PROVIDED FASTENERS ⑧.

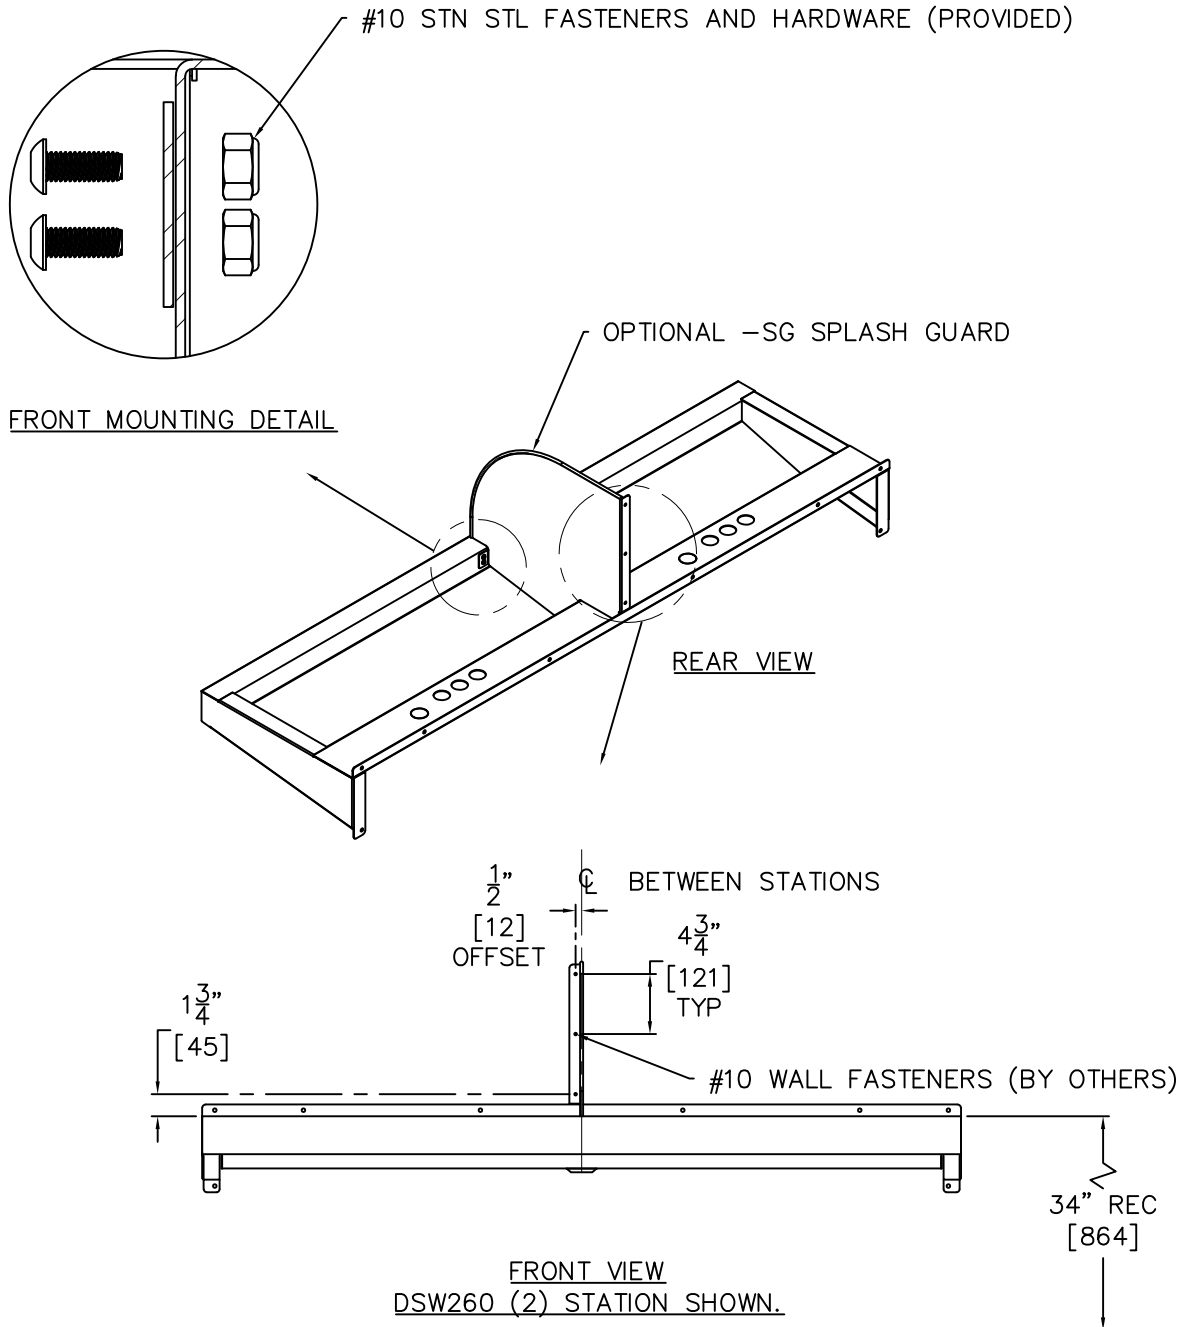

NOTES:
OPTIONAL -SG SPLASH GUARD IS LOCATED ON CENTERLINE BETWEEN STATIONS.
REFER TO APPLICABLE SUBMITTAL FOR DIMENSIONAL DATA AS REQUIRED FOR 2, 3
AND 4 PERSON UNITS.