


ACORN SAFETY P.O. BOX 3527 CITY OF INDUSTRY, CA 91744-0527 UNITED STATES OF AMERICA WWW.ACORNSAFETY.COM

CLAMSHELL RETROFIT KIT (S0000-CS1)

ASSEMBLY INSTRUCTIONS:

- 1. Turn off water supply before performing maintenance on unit.
- 2. Remove current yoke assembly (with spray heads). Remove strainer and existing bowl.
- 3. Replace existing bowl with clamshell assembly and re-install the strainer and yoke assembly in reverse order using appropriate thread sealants on threaded supply line joints. _{CLAMSHELL ASSEMBLY}
- 4. Attach clamshell linkage as shown in the detail on this page using supplied hardware.
- 5. <u>All parts must be properly aligned and</u> <u>tightened for proper functionality</u>. Test clamshell assembly by ensuring that lid will remain open in the on position and fully close in the off position.
- 6. Turn water on and test unit to ensure that eye/facewash unit functions as designed with the clamshell parts installed.

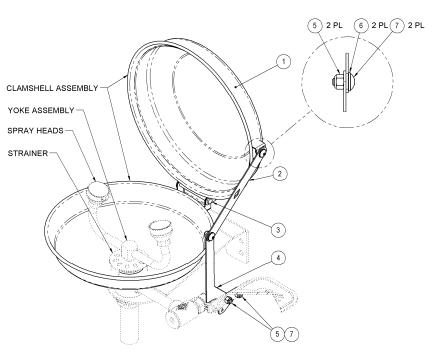

PARTS LIST

ITEM #	PART NUMBER	DESCRIPTION
1	7101-320-005	UPPER CLAMSHELL SUBASSY
2	7101-308-150	SIDE LINK 1, CLAMSHELL COVER
3	7101-312-001	STAINLESS STEEL PIVOT PIN ASSEMBLY
4	7101-310-150	SIDE LINK 2, CLAMSHELL COVER
5	0302-013-000	1/4-20 S/S HEX NUT W/NYLOCK
6	7101-316-000	.25 ID PLASTIC SHOULDER WASHER
7	6502-200-000	1/4-20 X 5/8 TRUSS HD PHILLIPS SCREW