

ACORN SAFETY P.O. BOX 3527 CITY OF INDUSTRY, CA 91744-0527 UNITED STATES OF AMERICA WWW.ACORNSAFETY.COM

INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS



MODESTY CURTAIN

Models S0000-MC1

TECHNICAL ASSISTANCE TOLL FREE TELEPHONE NUMBER 1.800.591.9360

TECHNICAL ASSISTANCE FAX: 1.626.855.4894

NOTES TO THE INSTALLER:

- **1.** Please leave this documentation with the owner of the fixture when finished.
- **2.** Please read this entire booklet before beginning the installation.
- 3. Check your installation for compliance with plumbing, electrical, ANSI Z358.1 and other applicable codes.

LIMITED WARRANTY UNITED STATES AND CANADA

Acorn Safety warrants that its products are free from defects in material or workmanship under normal use and service for a period of one year from date of shipment. Acorn's™ liability under this warranty shall be discharged solely by replacement of repair of defective material, provided Acorn™ is notified in writing within one year from date of shipment, F.O.B. Industry, California.

This warranty does not cover installation or labor charges and does not apply to materials, which have been damaged by other causes such as mishandling or improper care or abnormal use. The repair or replacement of the defective materials shall constitute the sole remedy of the Buyer and the sole remedy of Acorn[™] under this warranty. Acorn[™] shall not be liable under any circumstances for incidental, consequential or direct charges caused by defects in materials, or any delay in the repair or replacement thereof. This warranty is in lieu of all other warranties expressed or implied. Product maintenance instructions are issued with each unit and disregard or non-compliance with these instructions will constitute an abnormal use condition and void the warranty. Stainless steel must be protected on job sites during construction and must be properly maintained after the water has been introduced into the safety product or Acorn's [™] warranty is void.


Acorn Safety a division of Acorn Engineering™



PRELIMINARY STEPS

- 1. Read the installation instructions prior to beginning the installation.
- 2. Separate parts from packaging and verify all necessary parts are accounted for and undamaged. Obtain missing or damaged parts from Acorn Safety prior to beginning installation.
- 3. In order to comply with ANSI Z358.1, the safety equipment must be inspected periodically. An inspection tag is provided for documentation purposes.
- 4. All employees at risk of contamination should be informed and trained in the use of this and any other safety equipment. The signage provided should be posted appropriately in close proximity to this equipment.

ROUGH-IN

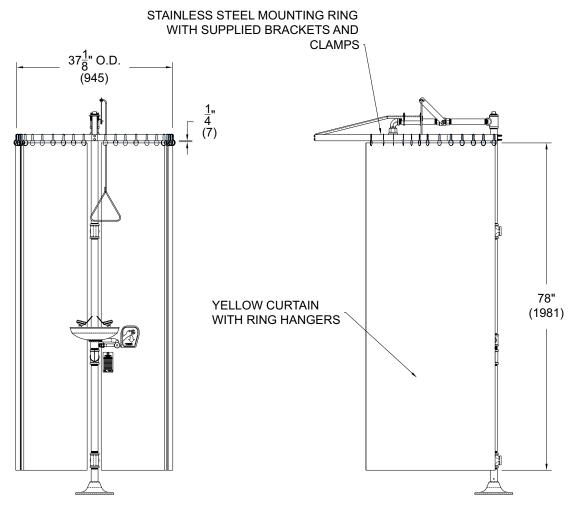

NOTES:

- 1. ALL DIMENSIONS IN INCHES (MM).
- 2. SHOWN INSTALLED ON A COMBINATION SHOWER AND EYEWASH, NOT INCLUDE.
- 3. TIE-BACK INCLUDED, NOT SHOWN.

Acorn Safety a division of Acorn Engineering™

Installation & Operation Manual

NOTE:

•Use hand tools and wrenches in a manner which will prevent marring finished surfaces.

STEP ONE: FRAME


- 1. Install bracket "B" to the horizontal shower pipe using two clamps "D". See view "A" and detail "B".
- 2. Slide thirteen curtain hooks "H" onto curtain rod "A".
- Repeat this procedure for the other curtain rod . 3. Install curtain rods "A" to bracket "B" using hardware "E, F & G". See detail "C". Check for levelness of all newly installed components and adjust as necessary.


STEP TWO: CURTAIN

1. Install shower curtain "C" to the pre-installed curtain hooks. Secure the curtain back to the vertical shower supply line using the attached Velcro patches.

D

DETAIL B SCALE 1:4

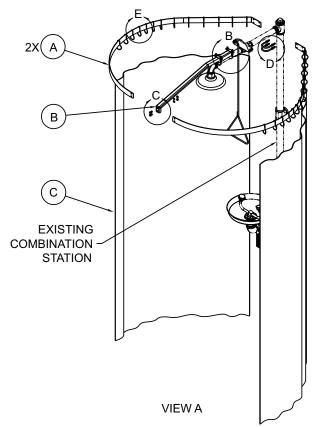

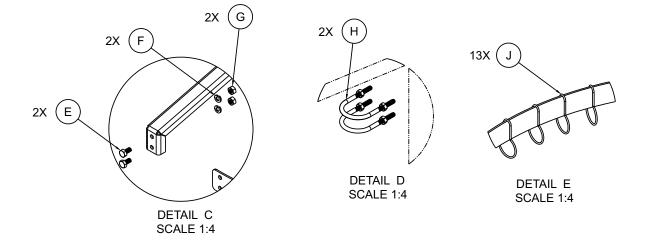


Manual #7109-210-001






PARTS LIST

ITEM #	PART NUMBER	DESCRIPTION
1	7102-330-199	CURTAIN ROD, S/S
2	7102-367-199	BRACKET, CURTAIN CNTR SUPRT
3	7102-328-000	SHOWER CURTAIN, VINYL, YELLOW
4	0206-004-000	BOLT, 1/4-20 X 1/2" HEX HEAD
5	0337-050-000	1/4 S/S LOCK WASHER
6	0302-005-000	1/4-20 S/S HEX NUT
7	0352-007-000	U-BOLT, 1" DIA. PIPE
8	3895-003-000	CURTAIN HOOK
9	0352-004-000	U-BOLT, 1.25" DIA. PIPE

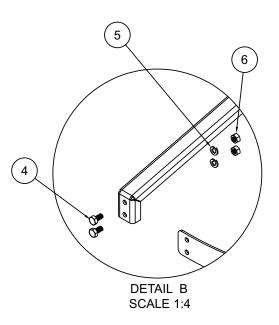

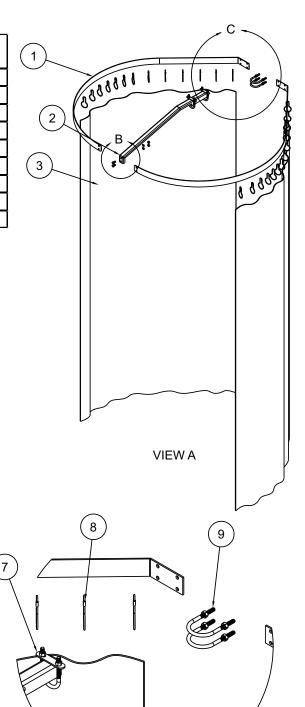

Manual #7109-210-001

DETAIL C SCALE 3:16